

Lifting Eyes and Bolts

As some of our rooflights are heavy they are often supplied with lifting eyes and bolts. If your rooflight does require these, the detail will be shown on your approval drawing. The lifting eyes are removable and are located into a welded nut located on the underside of the frame. On rooflights which are using the lifting eyes, it will normally be necessary to rebate the top face of the rafter to allow the frame to sit flat.



The eyebolts need to be screwed tight against the frame before commencing lifting operations. It is essential that a spreader bar is used during lifting to provide an even distribution of weight. Failure to do so will most likely result in damage to your rooflight.



After lifting please remove the eyebolt and seal the threaded hole with the silicone and M12 x 20 button head screws provided.

