




STELLA
ROOFLIGHT 

WIRING ISTALLATION GUIDE

LK-MR531/LK-MR532

Wiring diagram

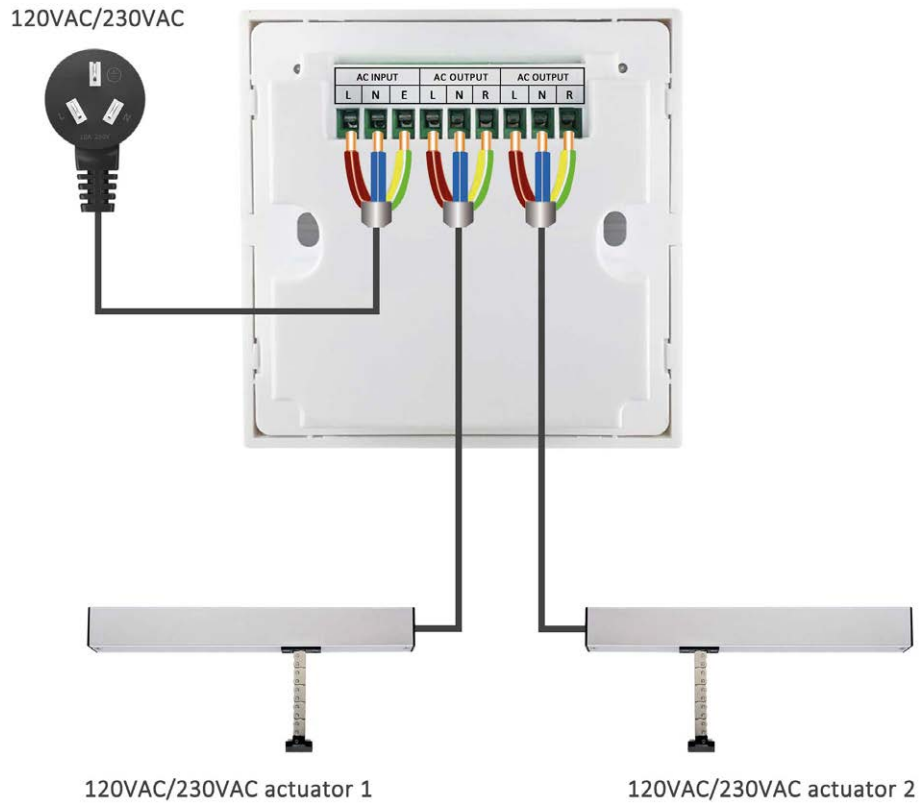


Wiring description

Controller	AC power
AC INPUT	Cable
L	Live wire
N	Null wire
E	Earth wire

Controller	AC actuator
AC OUTPUT	Cable
L	Brown
N	Blue
R	Yellow/Green

LK-MR533/LK-MR535

Wiring diagram

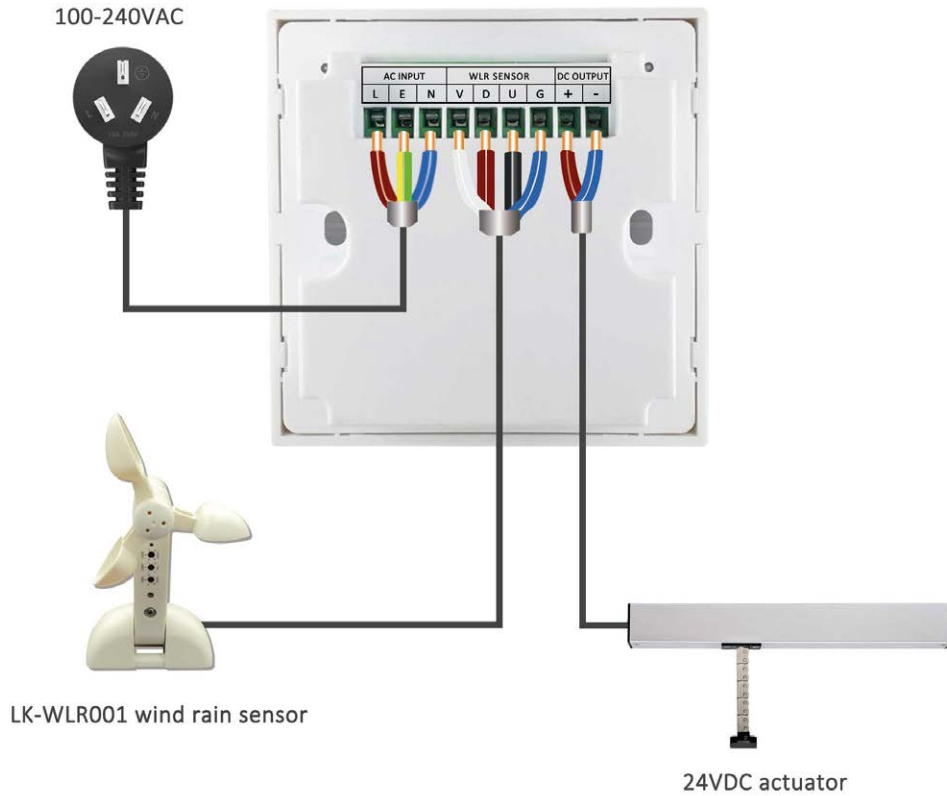

* LK-MR533/LK-MR535 can connect with LK-RS001 rain sensor as well.

Wiring description


Controller	AC power
AC INPUT	Cable
L	Live wire
E	Earth wire
N	Null wire

Controller	WLR001
WLR Sensor	Cable
V	White
D	Brown
U	Black
G	Blue

Controller	DC actuator
DC OUTPUT	Cable
+	Brown
-	Blue

LK-MR536

Wiring diagram

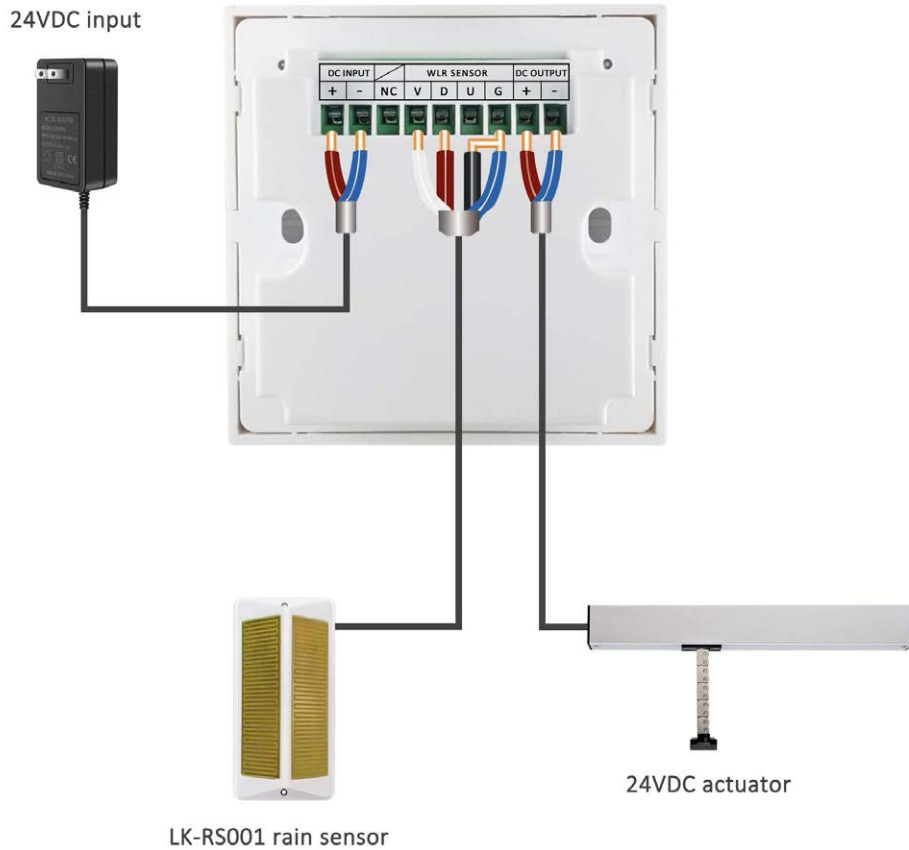

* LK-MR536 can connect with LK-WLR001 wind rain sensor as well.

Wiring description


MR536	DC power
DC INPUT	Cable
+	Brown
-	Blue

Controller	WLR001
WLR Sensor	Cable
V	White
D	Brown
U	
G	Blue+Black

Controller	DC actuator
DC OUTPUT	Cable
+	Brown
-	Blue


LK-MR533/LK-MR535

Wiring diagram

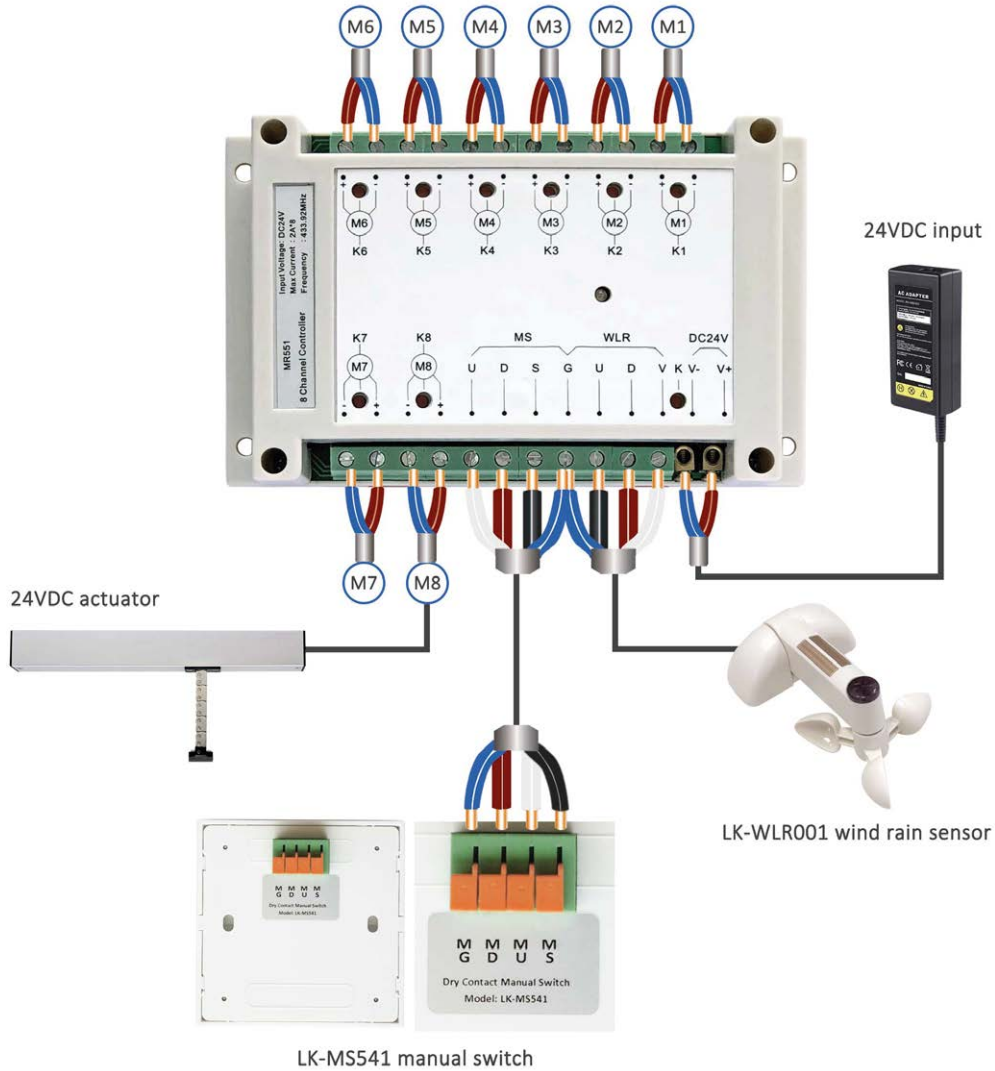

Wiring description

MR551	DC power	MR551	DC actuator	MR551	MS541	MR551	WLR001
DC24V	Cable	Mx	Cable	MS	Terminal	WLR Sensor	Cable
V+	24VDC+	+	Brown	U	MU	V	White
V-	24VDC-	-	Blue	D	MD	D	Brown
				S	MS	U	Black
				G	MG	G	Blue

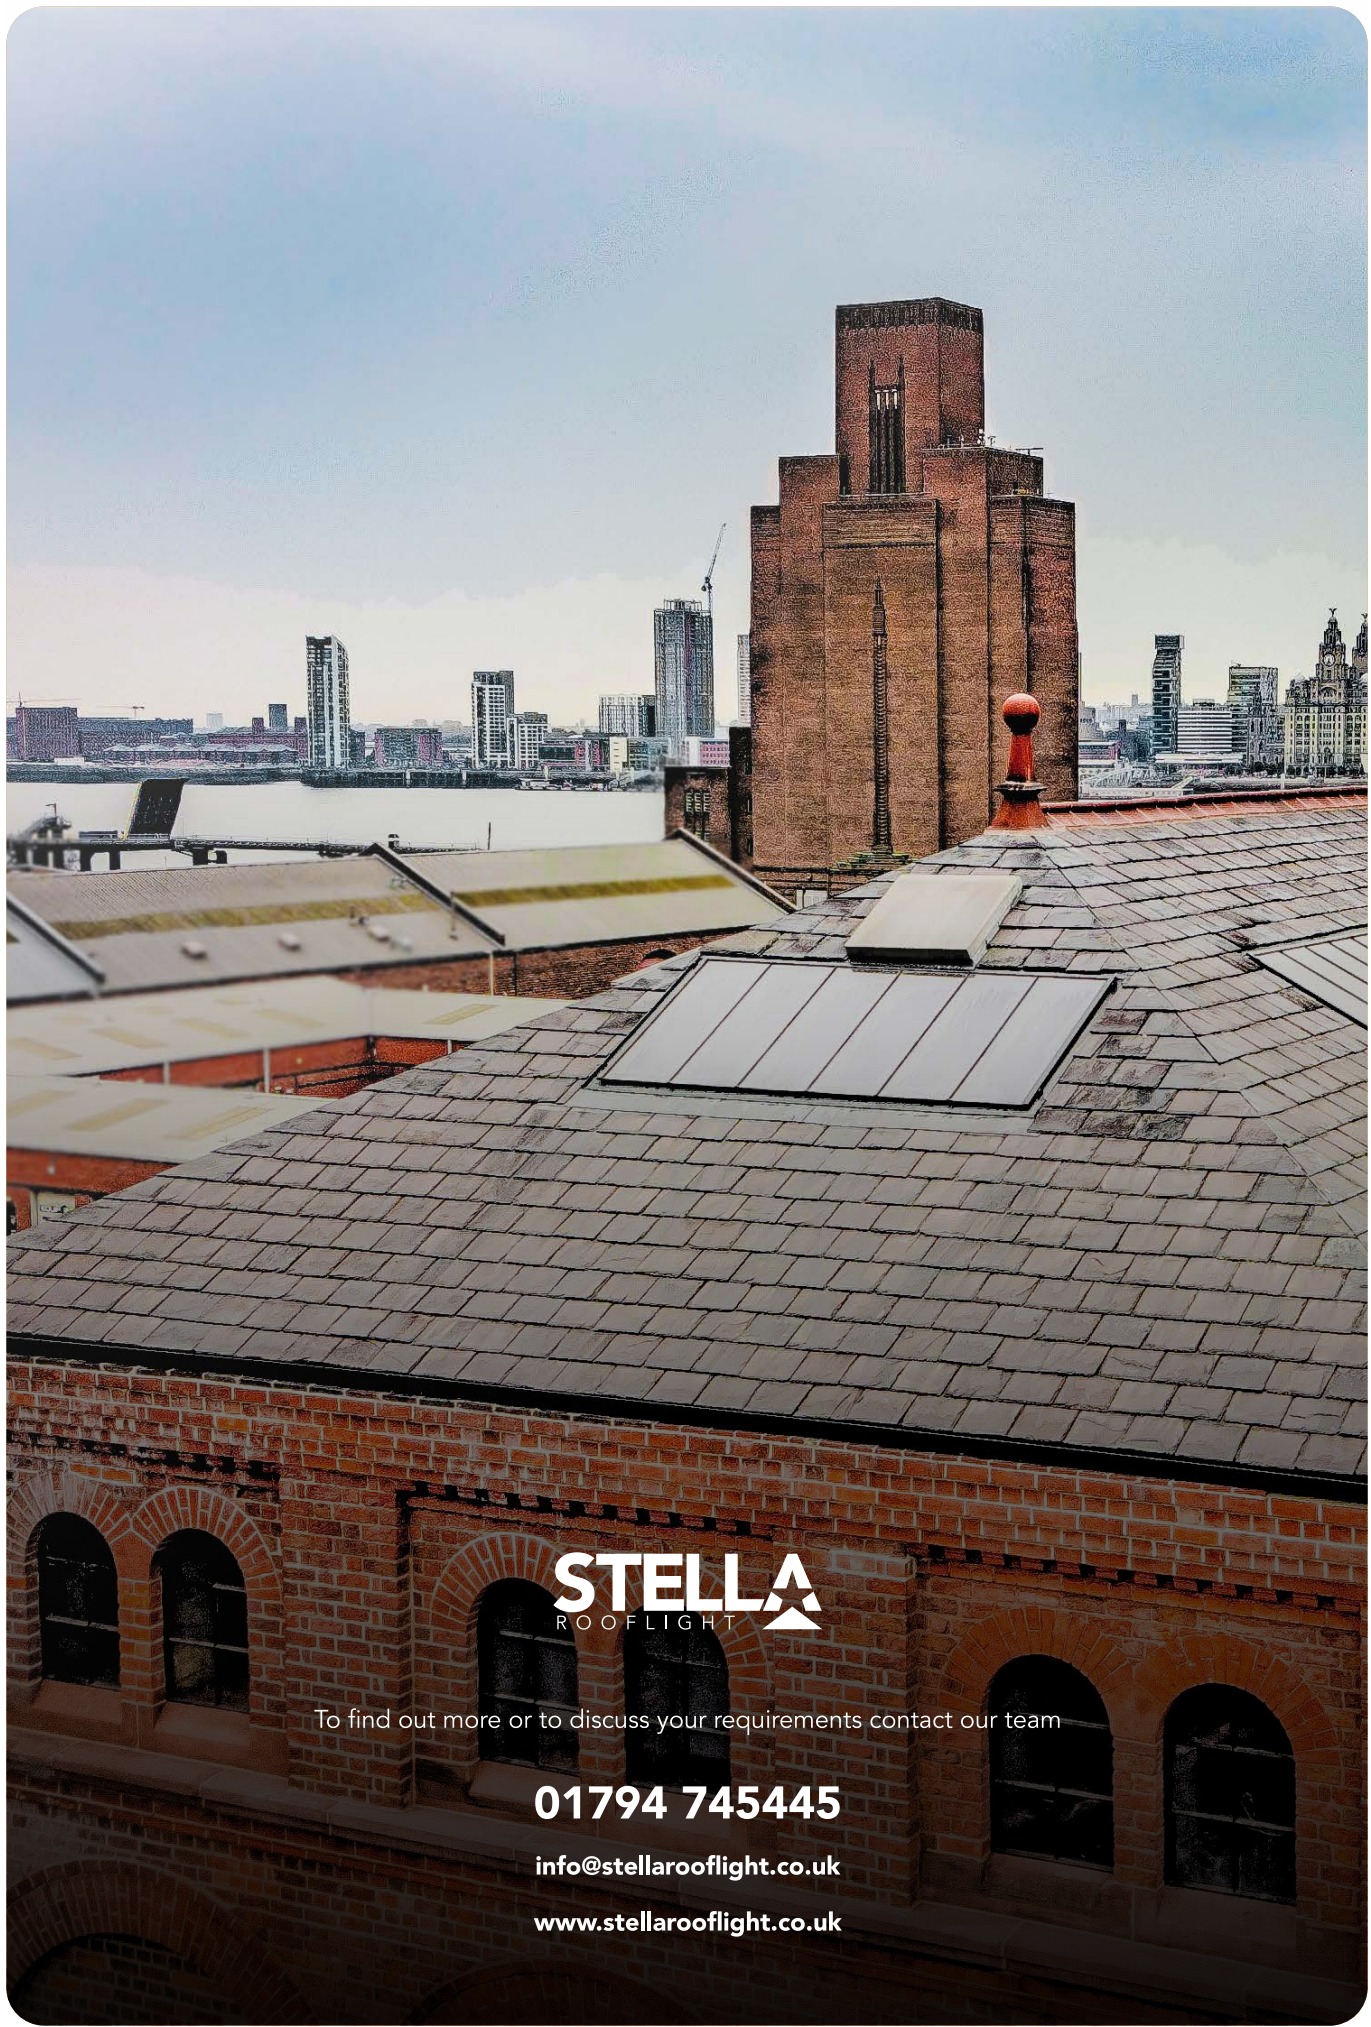

STELLA
ROOFLIGHT

To find out more or to discuss your requirements contact our team

01794 745445

info@stellarooflight.co.uk

www.stellarooflight.co.uk